

The Hufcor Partitions for this installation have been custom made to the architect's and owner's specifications. Each partition has been carefully fabricated and installed to provide many years of trouble-free service.

The key to the life of the product is proper operation and care. The correct operation and recommended care are outlined in this Owners Manual for your guidance.

If any malfunction of these partitions occurs, please phone your local Hufcor Distributor for service. This must be done immediately since Hufcor cannot be responsible for damages which result from delays or failure to advise Hufcor or Hufcor's local Distributor.

WARRANTY

Hufcor Partitions are guaranteed against defects in material and workmanship that occurred during the manufacturing of the product. Refer to your Hufcor Limited Warranty for additional details.

**THIS PARTITION WAS
SOLD AND INSTALLED BY:**

DISTRIBUTOR NAME:

ADDRESS:

CITY/STATE/ZIPCODE:

PHONE:

CONTACT PERSON:

EMAIL:

PROJECT INFORMATION:

JOB NAME:

HUF COR ORDER #:

INSTALLATION DATE:

ADDRESS:

CITY/STATE/ZIPCODE:

NOTES:

SUMMIT SERIES-645V

TOUCH SCREEN - CONTROLLER

IMPORTANT SAFETY NOTES

CAUTION - Only personnel who have been trained in accordance with these operating instructions should be permitted to operate the partition.

CAUTION – This wall may be operated with a single person. There is a main touchscreen (Fig. 1) for operation. If desired, an optional second push button switch (Fig. 2) is available which would require a two-person operation. Because of the bottom safety device on the 645 Series Summit vertical wall, the second push button is not required.

CAUTION - Caution people in the vicinity to maintain a safe clearance while the partition is in operation.

CAUTION - Report any malfunction to your local distributor at once and do not continue to operate



Fig.



Fig. 2

INITIAL SET-UP

This control device has been programmed for set-up with two levels of security, the Administrator (Admin) level and the User level. The Administrator has the ability to set and re-set passwords including the User(s) password.

» Admin Function – (Changing the User or Admin Password)

1. Touch the screen to activate the touchscreen.
2. Touch the Admin button (Fig. 3) and enter the password. The factory default password is 1111.
3. Select Change User Password or Change Admin Password (Fig. 4).
4. Enter the New User or New Admin Password and also confirm the User or Admin Password (Fig. 5). The password can be up to 7 digits of number characters.
5. Upon twice correctly entering the new password, select “OK” on the confirmation screen to continue. (Fig 6.)

» Admin Password Reset – (Factory Reset Admin Password)

CAUTION – Be careful with whom you share these instructions. It is not recommended that these instructions be shared with employees who have not been trained in operating this movable wall system. In the event that the Admin password has been forgotten or misplaced, follow these instructions to initiate a password reset:

1. Touch the screen to activate the touchscreen.
2. In the upper left corner of the Password screen (Fig. 7), press and hold for 7 seconds. The screen will turn “light blue” in color while you press it.
3. The Factory Reset Admin Password screen will appear (Fig. 8). Press the Factory Reset Admin Password button. A confirmation screen will pop up asking to confirm the reset. Once that is confirmed, the Admin password will be changed to the factory default password of 1111.



Fig. 3

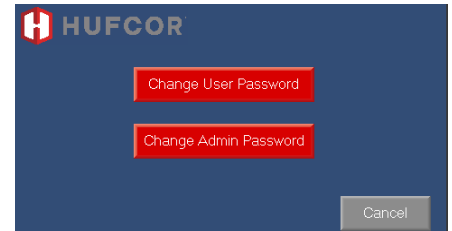


Fig. 4



Fig. 5



Fig. 6



Fig. 7



Fig. 8

TO CLOSE THE VERTICAL LIFT PARTITIONS

Moving partition from stored position to extended position.

1. Touch the screen to activate the touchscreen.
2. Touch the Password button and enter the password (Fig. 9). The factory default password is 2222.
3. Hold down the Close button to move the partition (Fig. 10)
CAUTION - Be certain to observe the panels as they unfold to insure there are no obstructions and that the path remains clear.
4. Continue to press the button(s) until the wall is fully deployed and the movement stops automatically.
5. The operator at the touchscreen can either walk away and allow the touchscreen to go to sleep in 60 seconds or touch the Lock button causing it to go to sleep right away.
6. If there is a system fault, the Normal mode (Fig. 10) will turn yellow and show Fault (Fig. 11). Check to make sure nothing has contacted the bottom edge safety device on the bottom panel. Once verified that all is clear, press the Reset button. The yellow Fault mode will turn back to Normal mode.

TO OPEN THE VERTICAL LIFT PARTITIONS

Move partition from extended position to stacked position. Touch the screen to activate the touchscreen.

1. Touch the screen to activate the touchscreen.
2. Touch the password button and enter the password (Fig. 12). The factory default password is 2222.
3. Hold down the OPEN button to move the partition.
4. *CAUTION - Be certain to observe the panels as they move to ensure the partition is operating properly.*
5. Continue to press the button(s) until the wall is fully stored away and wall movement stops automatically.
6. The operator at the touchscreen can either walk away and allow the touchscreen to go to sleep in 60 seconds or hit the Lock button causing it to go to sleep right away.
7. If there is a system fault, the Fault indicator will illuminate (Fig. 13). Check to make sure that an obstruction has not blocked the leading edge of the vertical wall. Once verified that all is clear, press the Reset button. The controls return to Normal mode. Continue to close the partition by pressing the "Close" button.



Fig. 9

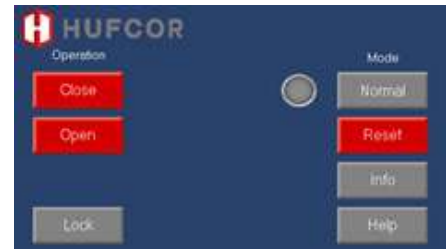


Fig. 10



Fig. 11



Fig. 12



Fig. 13

HELP

» Additional assistance

1. Touch the screen to activate the touchscreen.
2. Once logged into the system, select the Help button (Fig. 13). “The Help screen assists with defining system terminology and functions (Fig 14).”
3. Select the Info button (Fig. 13) for essential information including the software version installed, the series of partition installed, and the Hufcor order number and the date of installation. Also provided is the Hufcor phone number and the website you can visit to find your local distributor information (Fig. 15)
4. This device contains a back-up battery which lasts approximately 7 years. This battery backs-up the installation settings and data as well admin and user passwords. In the event the low battery indicator is displayed in the upper right corner of the Operations screen (Fig. 16), contact Hufcor or the local distributor to service the Touchscreen unit and replace the back-up battery.



Fig. 12



Fig. 13



Fig. 14



Fig. 15



Fig. 16